


# Air Brake Push-In - Fittings

## NORGREN - IMPERIAL FLEETFIT FITTINGS


### STRAIGHT CONNECTOR

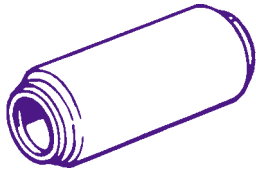

Tube OD	Part No	Pkt No
1/4	6665	PIF465
3/8	6667	PIF467
1/2	6668	PIF468
5/8	6669	PIF469


### TEE CONNECTOR

Tube OD	Part No	Pkt No
1/4	6675	PIF475
3/8	6677	PIF477
1/2	6678	PIF478
5/8	6679	

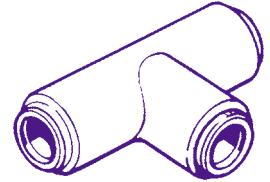


### UNEQUAL TEE CONNECTOR

Tube OD			Part No
A	B	C	
1/2	1/2	3/8	6681

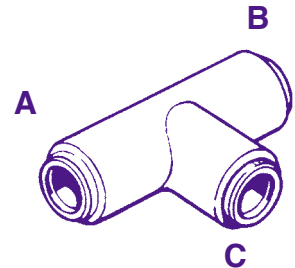


### ELBOW CONNECTOR

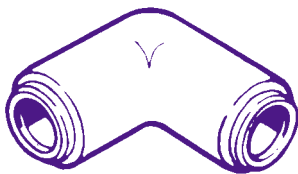

Tube OD	Part No	Pkt No
1/4	6684	PIF484
3/8	6686	PIF486
1/2	6687	PIF487

### STRAIGHT BULKHEAD CONNECTOR

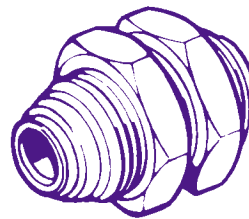


Tube OD	Part No
1/4	6692
3/8	6694
1/2	6695

# Air Brake Push-In - Fittings

## NORGREN - IMPERIAL FLEETFIT FITTINGS

### STRAIGHT STUD IMPERIAL

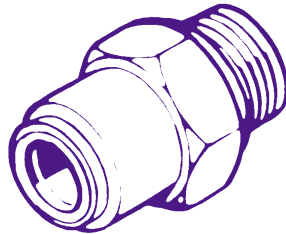

NPT Thread	Tube OD	Part No
1/8	3/16	6699NPT
1/4	3/16	6700NPT
1/8	1/4	6701NPT
1/4	1/4	6705NPT
1/8	3/8	6706NPT
1/4	3/8	6707NPT
1/4	1/2	6708NPT
3/8	3/8	6712NPT
3/8	1/2	6713NPT
1/2	3/8	6714NPT
1/2	1/2	6715NPT
1/2	5/8	6716NPT

BSP Thread	Tube OD	Part No	Pkt No
1/8	1/4	6701	PIF501
1/4	1/4	6705	PIF505
1/8	3/8	6706	
1/4	3/8	6707	PIF507
1/4	1/2	6708	PIF508
3/8	3/8	6712	PIF512
3/8	1/2	6713	PIF513
1/2	3/8	6714	PIF514
1/2	1/2	6715	PIF515