


Air Brake Push-In - Fittings

NORGREN FLEETFIT FITTINGS

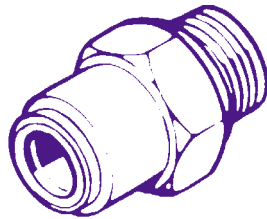

STRAIGHT STUD METRIC THREAD TO IMPERIAL TUBE

Thread	Tube OD	Part No	Pkt No
M10 x 1	1/4	6770	PIF570
M12 x 1.5	1/4	6771	PIF571
M16 x 1.5	1/4	6772	PIF572
M16 x 1.5	3/8	6773	PIF573
M22 x 1.5	3/8	6774	PIF574
M16 x 1.5	1/2	6775	PIF575
M22 x 1.5	1/2	6776	PIF576
M22 x 1.5	5/8	6778	PIF578
M16 x 1.5	5/8	6777	